

REMINGTON®

Guía de Utilización y Cuidados



PF7200

1. Interruptor on/off
2. Láminas
3. Contenedor de vello
4. Botón de liberación del contenedor de vello
5. LED indicador de carga
6. Corta patilla plegable
7. Protector del cabezal
8. Cable de alimentación
9. Orificio para enchufar el cable
10. Cepillo de limpieza

INSTRUCCIONES IMPORTANTES PARA EL CUIDADO

Cuando se usan electrodomésticos, en especial cuando hay niños presentes, se deben tomar en cuenta precauciones básicas, incluyendo las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR.

MANTENGA ALEJADO DEL AGUA.

PELIGRO

Para reducir el riesgo de descarga eléctrica:

- Siempre desenchufar este artefacto de la toma de electricidad inmediatamente después de ser usado.
- No usar durante el baño o dentro de la ducha.
- No colocar o almacenar este aparato donde se pueda caer en una bañera o lavamanos.
- No colocar o dejar caer dentro del agua u otro líquido.
- No tomar un artefacto que haya caído dentro del agua. Desenchúfelo inmediatamente.
- Desenchufe este aparato antes de limpiarlo.

ADVERTENCIA

Para reducir el riesgo de quemaduras, fuego, electrocución o heridas a personas:

- Este artefacto no está diseñado para ser usado por personas con incapacidad sensorial o mental (incluido niños) o que no tengan experiencia, a menos que se les supervise o capacite sobre el uso del producto por una persona responsable de su seguridad.
- Niños deben ser supervisados para asegurar que no jueguen con el artefacto.
- Use este artefacto sólo bajo el propósito del cual se describe en este manual. No utilice accesorios no recomendados por el fabricante.
- Nunca opere este aparato si:
 - El cable o el enchufe está dañado.
 - Se ha caído
 - Le ha ingresado agua
 - Se ha estropeado, roto o no funciona correctamente
 - En cualquiera de estos casos lleve inmediatamente el aparato al centro de reparaciones.
- Mantenga el cable de electricidad fuera de superficies calientes.
- No enrolle el cable alrededor del aparato.
- Nunca lo use cuando duerma.
- Nunca tire o inserte ningún objeto dentro de las aberturas del aparato.
- No operar donde se usan aerosoles o se administra oxígeno.

- No conectar a una extensión eléctrica.
- Sólo para uso doméstico.
- Siempre almacene este electrodoméstico en un área libre de humedad. No lo almacene en temperaturas superiores a 60°C.

- Remueva el cable del aparato para almacenarlo.
- No enchufe o desenchufe este artefacto con las manos mojadas.
- No use este aparato con la malla o las cuchillas dañadas ya que podría lastimarse la cara.



CUIDADO: No usar este aparato cerca de bañaderas, duchas u otros recipientes con agua.

Sobre su afeitadora



CARACTERÍSTICA	PF7200
SISTEMA DE ENERGÍA	recargable
TIEMPO DE CARGA COMPLETA	16 hrs
TIEMPO DE AFEITADO SIN CABLE	30 min
INDICADOR	LED indicador de carga
TIPO DE VOLTAJE	100-240V~
Nº DE PIEZA PARA REMPLAZO	SPF-PF72

Indicador de recarga – La luz permanecerá prendida cuando la carga está completa, hasta que se desenchufe.

¿Cómo empezar?

Antes de usar, lea las instrucciones importantes sobre la seguridad en la parte delantera del manual.

- Asegúrese de que el aparato esté apagado. Al usarla por primera vez, conecte la afeitadora al adaptador (Dia. A), éste a la red eléctrica (Dia. B) y cargue el aparato por lo menos durante 24 horas (Dia. C). Durante la carga del producto, el indicador verde permanecerá encendido hasta ser desenchufado.



- Cuando esté conectado, el indicador de carga se iluminará.
- ****Utilice el producto hasta que la batería esté baja. Para preservar la vida de las baterías descárguelas cada seis meses y luego recárguelas por 24 horas***
- Una vez descargada, la batería se cargará en 16 horas para proveer con una autonomía de 40 minutos de tiempo de afeitado.


¿Cómo usar?

Afeitado
Asegúrese de que su afeitadora está correctamente cargada.

1. Comience retirando el protector del cabezal de la afeitadora.
2. Deslice el botón de encendido/apagado para prender la afeitadora. (Dia. D)
3. Deslice el botón de liberación hasta que sea posible tomar la navaja y utilícelo para cortar el vello largo primero. Cerrarlo cuando haya terminado. (Dia. E_F)
4. Estire la piel con la mano libre de forma



5. Sostenga el cabezal de afeitado de modo que todas las láminas estén en contacto a la vez con la piel. Las láminas flotantes independientes se ajustan de forma automática al contorno de la cara. Durante el afeitado, aplique sólo una ligera presión sobre el cabezal de afeitado y emplee movimientos cortos y circulares. (Dia. G)
6. Tras el afeitado, apague la afeitadora. (Dia. D)



Consejos para el afeitado

- Asegúrese de que la piel esté seca.
- Espere para rasurarse hasta 15 minutos después de haberse despertado, así se asegurará de que su cara estará libre de hinchazón que se puede generar al dormir.
- Sostenga siempre la afeitadora en ángulo recto con la piel de forma que la lámina toque su piel con presión uniforme.
- Realice movimientos suaves entre moderados y lentos.
- Unos desplazamientos circulares cortos en zonas complicadas pueden facilitar un afeitado más apurado, especialmente a lo largo de la línea del cuello y de la barbilla.
- NO mantenga la afeitadora en un ángulo con el que sólo una lámina esté en contacto con la piel. De lo contrario, se deformará la lámina y puede que las cuchillas dañen la lámina.
- A fin de prevenir daños en la lámina, NUNCA presione con fuerza contra la piel.

Recorte

1. Deslice el botón de liberación de la cortadora para tomar la navaja. (Dia. H)
2. Recorte vellos largos y difíciles y los de las patillas. (Dia. I)
3. Cierre la recortadora presionándola hacia abajo. (Dia. J)



Remoción de la batería

Cuando su afeitadora llega al fin de su vida útil, las baterías deberán ser removidas de la afeitadora y recicladas o desechadas de la manera adecuada en concordancia con los requerimientos legales estatales o locales. Si esto no fuese requerido por ley, podrá optar por desechar la afeitadora sin remover la batería.

Este aparato usa uno de los siguientes tipos de batería recargable: Metal de níquel híbrido (NiMH), níquel-cadmio (Ni-Cd) o Iones de Litio (Li-Ion) (vea el tipo de batería incluida).

****Nosotros recomendamos que utilice su máquina de afeitar diariamente hasta por cuatro semanas, para permitir que su piel y vellos se acostumbren al nuevo sistema de afeitado.****

Reemplazos

Sustitución de las láminas y las cuchillas

Para garantizar un óptimo rendimiento de su afeitadora, recomendamos sustituir regularmente las láminas y las cuchillas. Cuando hay que cambiar las láminas y las cuchillas:

■ Irritación: Cuando las láminas se desgasten, puede sentir irritación en la piel.

■ Tirantez: Cuando se desgastan las cuchillas, puede que el afeitado no se sienta muy apurado y quizá note que la cuchilla tira del vello.

■ Desgaste visible: Puede notar que las cuchillas han desgastado las láminas.



Sustitución de la lámina

1. Apriete los botones que están en los lados del mango para levantar las navajas. Tire las navajas usadas. (Dia. K)
2. Coloque la nueva navaja en su lugar. (Dia. M)

Sustitución de la cuchilla

1. Remueva el porta-navaja. (Dia. K)

2. Apriete la navaja y rótelea 90° contra la manecillas del reloj y levante. No la sulte. (Dia. N)
3. Coloque la nueva navaja, apriete y gire 90° contra las manecillas del reloj. (Dia. O)



Recambios:

Modelo de recambio SPF-PF72

ADVERTENCIA: Sujete cada cuchilla entre el dedo pulgar y el índice y tire hacia arriba.

Garantía

© 2016 Spectrum Brands, Inc.
06/16 Job#12338-02

T22-0003483-A

Diseñado en USA

HECHO EN CHINA

PF7200:
Características eléctricas:
100-240V~ 50/60Hz 200mA



REMINGTON®

Use and Care Guide



PF7200

1. On/Off switch
2. Screens
3. Hairpocket
4. Hairpocket release buttons
5. Charging indicator
6. Pop-up trimmer
7. Head guard
8. Power adapter
9. Power port
10. Cleaning brush

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. **Read all instructions before using this shaver.**

DANGER

To reduce the risk of electric shock:

- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Detach the appliance from the power supply cord before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Use only when the shaver is in dry condition.
- Do not submerge in water.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children, or individuals with special needs or certain disabilities.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any of the appliance's openings.
- Do not wrap the cord around the appliance.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord or a voltage converter with this appliance.

- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always attach the plug to the appliance, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.

- Detach removable power cords from appliance for storage.
- Always pull on cord plug to unplug from wall socket. Never pull on electric cord.
- Do not plug or unplug this appliance when your hands are wet.
- Do not use this appliance with a damaged or broken head or cutters, as facial injury may occur.



CAUTION: This product is not suitable for use in bath or shower.

- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Detach removable power cords from appliance for storage.
- Shavers, including the trimmer, are for use on facial hair only. They should not be used for shaving the hair on your head or any other part of your body.
- For additional protection the installation of a residual current device (RDC) with a rated residual operating current not exceeding 30mA is advisable. Ask an electrician for advice (Argentina/Chile).

SAVE THESE INSTRUCTIONS

About Your Shaver



FEATURE	PF7200
POWER SYSTEM	Cordless/Rechargeable
FULL CHARGE TIME	16 hrs
CORDLESS SHAVING TIME	30 min
LED INDICATOR	charging
VOLTAGE TYPE	100-240V~
REPLACEMENT PART NO.	SPF-PF72

Charging Indicator – green light that glows when the shaver is being charged. Light will stay on at full charge until unplugged.

Charging

Before using, read the important safety instructions in front of the manual.

1. Connect the cord to the shaver and then to the electrical outlet. (Dia. A & B) The charging indicator light will glow green.
2. Charge your new shaver for 24 hours before its first use. This first charge is important to the shaver's battery life. (Dia. C)



****Use the product until the battery is low. To preserve the life of the batteries, let them fully run out every six months, then recharge them for a full 24 hours.***


CAUTION!

- Make sure the shaver and your hands are dry when placing the shaver on charge.
- Always charge the shaver in a cool, dry place.


Shave

Before using, read the important safety instructions in front of the manual.

1. Begin by removing the protective head guard from your shaver.
2. Slide the on/off button up to turn on. (Dia. D)
3. Slide trimmer button up to engage and use it to remove long hair first. Then close down when finished. (Dia. E_F)
4. Stretch the skin with your free hand so the hairs stand upright.



5. Hold the shaving head so all screens touch your skin simultaneously. The independently floating screens automatically adjust to the contours of your face. Only apply light pressure on the shaving head while shaving and use short, circular strokes. (Dia. G)
6. After shaving, turn the shaver off. (Dia. D)





We recommend that you use your new shaver daily for up to three weeks to allow time for your hair and skin to become accustomed to the new shaving system.*

Shaving Tips

- Ensure your skin is dry and free of oils.
- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Always hold the shaver at a right angle to the skin so the screens are touching the skin with equal pressure.
- Stretch skin with the free hand so hairs

- stand upright, making it easier for them to enter the cutting chamber.
- Shave with short, circular strokes. The use of short, circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not press hard against the skin in order to avoid damage to the screens.

Trim

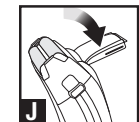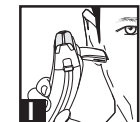

1. Slide trimmer release button up to engage trimmer. (Dia. H)
2. Trim long, difficult hairs and side burns. (Dia. I)
3. Close trimmer by pressing down. (Dia. J)

Battery Removal

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver with the batteries.

This device uses one of the following types of rechargeable batteries: nickel metal hydride (NiMH), nickel cadmium (Ni-Cd) or Lithium Ion (Li-Ion) (see included battery for indication of type).

CAUTION: ALL RECHARGEABLE BATTERIES MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE

WITH APPLICABLE STATE AND LOCAL REGULATIONS. DO NOT PUT IN FIRE OR MUTILATE, AS THE BATTERY MAY BURST OR RELEASE TOXIC MATERIALS. DO NOT SHORT-CIRCUIT, AS THIS MAY CAUSE BURNS.

To Remove the Rechargeable Battery:

1. Remove phillips head screw from the back panel of shaver.
2. Pry the back panel off the shaver releasing the snap fits.
3. Snip the battery wires and remove the batteries.
4. Dispose of batteries properly.

Cleaning & Care


NOTE: **When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.**

For optimal shaver performance, clean your shaver after each use.

- Do not remove or replace head assembly while shaver is running as it may cause damage to the unit's screens and cutters.
- To clean the external surfaces of the shaver, use a damp cloth. Do not use strong detergents or other chemicals.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.
- The shaver should not be used until it has dried.
- Lubricate each cutter with household oil.
- This shaver has no user serviceable parts.

Daily Cleaning:

1. Grasp the sides of the cutter assembly and pull away from the shaver body. (Dia. K)
2. Tap the stubble from the foils and cutters.
3. Replace the hairpocket assembly. (Dia. M)



Monthly Cleaning:

1. Grasp the sides of the cutter assembly and pull away from the shaver body. (Dia. K)
2. Tap the stubble from the foils and cutters.
3. Use the cleaning brush to delicately sweep any loose hairs from the cutters and trimmer. (Dia. L)
4. After cleaning, replace the hairpocket assembly. (Dia. M)

Replacing the Foils & Cutters

To ensure the continued highest quality performance from your shaver, we recommend that foils and cutters are replaced regularly. Signs that your foils and cutters need replacing:



- Irritation: As foils get worn, you may experience skin irritation.
- Pulling: As the cutters wear, your shave may not feel as close and you may feel your cutter pulling your hair.
- Wear through: You may notice that the cutters have worn through the foils.

To Replace the Foil

1. Grasp the foil carrier grips on the sides of the shaver and pull up to remove the foils. Discard the used foils. (Dia. K)
2. Snap a new foil carrier in place. (Dia. M)

To Replace the Cutters

1. Remove the foil carrier. (Dia. K)
2. Depress cutter and rotate it 90° counterclockwise and lift off. Do not lose spring. (Dia. N)
3. Place new cutter on oscillator tip, depress and rotate 90° counterclockwise. (Dia. O)



Spare Parts:

Replacement model: SPF-PF72

NOTE: Do not press on the cutter ends as this may cause damage.

Performance Guarantee

© 2016 Spectrum Brands, Inc.
06/16 Job#12338-02

T22-0003483-A

Dist. by:
Spectrum Brands, Inc.,
Middleton, WI 53562

Designed in USA
MADE IN CHINA/HECHO EN CHINA

PF7200:
Electrical Characteristics:
100-240V~ 50/60Hz 200mA

Replacements